




Contemporary
Lighting™

Installation Instructions Model E22465-75PC

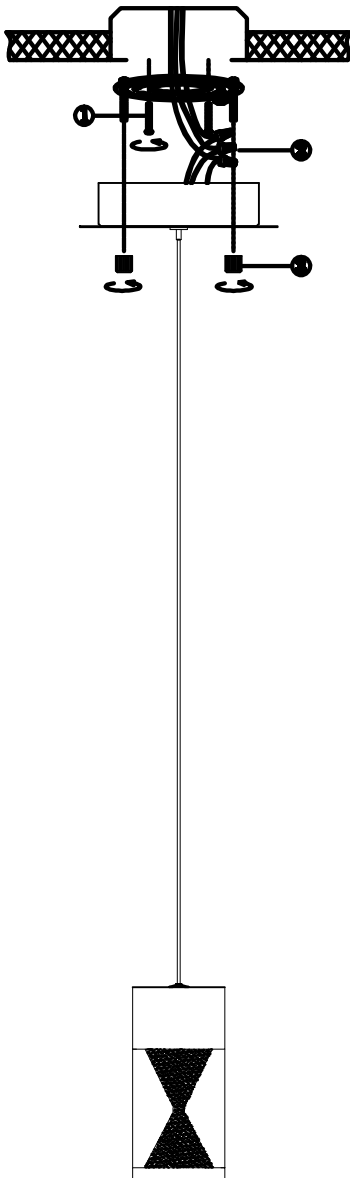

1. It is recommended the fixture be installed by a qualified licensed electrician.
2. Turn breaker off for circuit on outlet where fixture is to be installed.
3. Install round mounting bracket to outlet box.
4. Determine mounting height of fixture and cut wire leaving an additional 12 \pm of extra wire for wiring.
5. Thread wire through bottom of decorative dome canopy and let slide down wire to top of pendant.
6. Insert wire into bottom of mounting cap and tie knot in cord on inside cap for strain relief. Position mounting cap to ceiling to check mounting height. Adjust if necessary.
7. Wire fixture to outlet. Connect white to neutral and green to ground.
8. Install mounting cap to mounting bracket and tighten cap nuts.
9. Move decorative canopy up wire to meet ceiling and tighten screw on bottom to secure.

Warning! This fixture is supplied with permanently installed LED light engine. The transformer for this light engine is not dimmable. Do not use a dimmer on this fixture or it will damage the transformer.